

Folding the Boomerang 10

The Boomerang 10 uses plastic reinforcements to optimize the performance and handling of the wing. To protect the wing and ensure the long life of the product we have included a foam tube that, when folded with the wing, will decrease the angle and strain placed on the leading edge when packed into your rucksack.

After unpacking the wing you can use the compression straps on either side of the foam tube to decrease the packing volume to easily fit into your harness back pocket.

Follow the steps below for proper use:



IMPORTANT: When storing the wing for extended periods of time, it is best to pack the glider into the concertina bag and leave unfolded.